

Reason Controller assignments: NN-19 & NN-XT

NN-19	
MIDI CC #	Parameter
1	Mod Wheel
2	
3	
4	
5	Portamento Master Level
6	
7	
8	
9	Amp Env Decay
10	
11	
12	Amp Env Sustain
13	
14	Filter Env Attack
15	Filter Env Decay
16	Filter Env Sustain
17	Filter Env Release
18	Filter Env Amount
19	Filter Env Invert
20	Sample Start
21	Osc Octave
22	Osc Semitone
23	Osc Fine Tune
24	Osc Env Amount
25	Osc Kbd Track
26	LFO Rate
27	LFO Amount
28	LFO Wave
29	LFO Dest
30	LFO Sync Enable
31	Filter Freq Mod Wheel Amount
32	
33	
34	Filter Res Mod Wheel Amount
35	Filter Decay Mod Wheel Amount
36	Amp Mod Wheel Amount
37	LFO Mod Wheel Amount Pitch Bend Range
38	
39	
40	Filter Freq Ext Mod
41	LFO Ext Mod
42	Amp Ext Mod
43	Ext Mod Select
44	
45	Amp Vel Amount
46	Filter Env Vel Amount
47	Filter Decay Vel Amount
48	Amp Attack Vel Amount
49	Sample Start Vel Amount
50	
51	
52	
53	
54	
55	Solo Sample

56	Spread Mode
57	Stereo Spread
58	
59	
60	
61	
62	
63	
64	
65	
66	
67	
68	Key Mode
69	
70	
71	Filter Res
72	Amp Env Release
73	Amp Env Attack
74	Filter Freq
75	Filter On/Off
76	Filter Mode
77	Filter Kbd Track

NN-XT

MIDI CC #	Parameter
1	Mod Wheel
2	Mod Wheel 2* Assuming source is set to Breath
3	
4	
5	Master Volume
6	
7	
8	
9	Amp Env Decay
10	
11	Mod Wheel 2** Assuming Source is set to Expression
12	
13	
14	
15	Mod Env Decay
71	Filter Res
72	Amp Env Release
73	Amp Env Attack
74	Filter Freq